


VX-3/VX-2/E520/E316 Seat Wheel Replacement

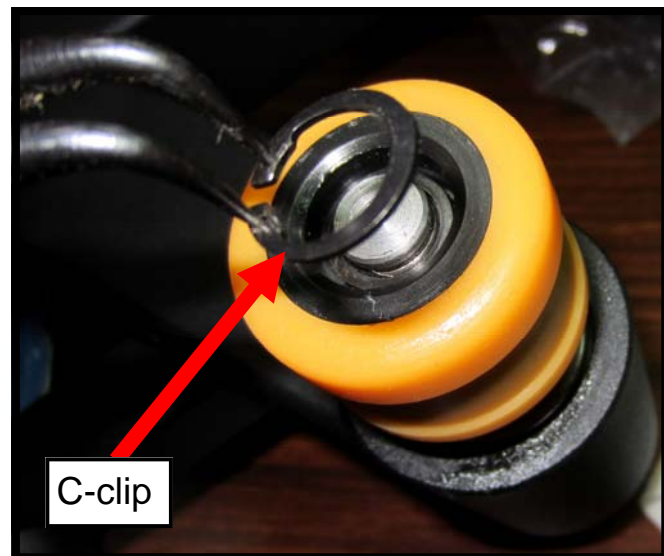

First, using a pair of C-clip pliers, removed the C-clip holding the seat wheel onto the axle. Behind the C-clip is another washer. Then, remove the wheel itself (this can sometimes take a little persuasion). Behind the seat wheel there are 3 washers (spacers) that make up the gap between the rear of the seat wheel and the seat frame bearing.

Note: On older products, it is sometimes necessary to install and test different configurations. Generally, whatever came off the axle is what should go back on. There may be four washers, but usually 3. Only remove one wheel at a time. If the axle or bearings require replacement, please refer to the appropriate service note.

